

# INSTRUCTION SHEET

## EXTREME PRESSURE GAUGES



### MOUNTING


QuickCar Extreme pressure gauges come with mounting hardware included. These mechanical gauges can be mounted in a 2-5/8" hole. **Please note:** when attaching a line to the back of the gauge not to overtighten it, this can lead to premature failure of the gauge.

### WIRING

**Grounding:** QuickCar mechanical gauges are designed to be grounded through the mounting bracket if the mounting plate is metal grounded to the car. In cases when the gauge is mounted in fiberglass/carbon fiber, a ground wire is needed from the mounting stud to a chassis ground.

**Back Lights:** Once the gauge is grounded, a positive wire should connect the vehicle's ignition switch to the +12V post on the gauge. The post is marked on the back of the gauge and requires a #6 ring terminal.

**Warning Lights:** Warning lights require additional pressure switches to function. It is most efficient to tee off the back of the gauge. And route a wire from the pressure switch to the "sender" stud on the back of the gauge.

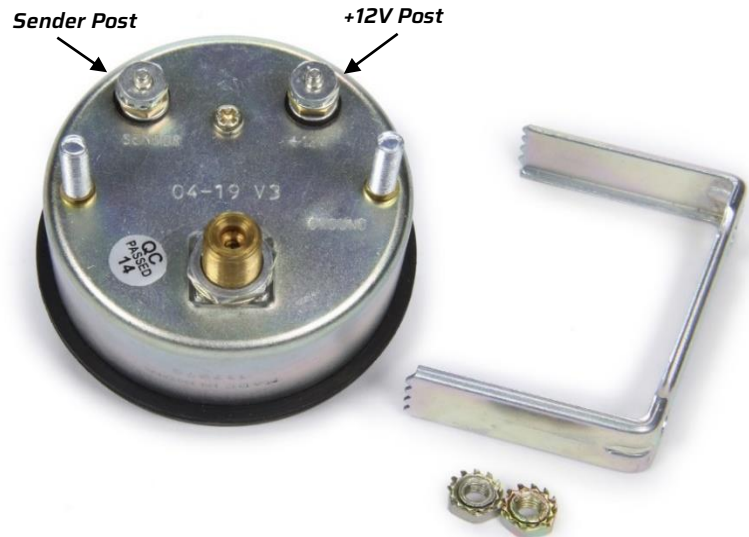

### WARNING LIGHT WIRING KITS

QuickCar offers the following kits to complete the wiring process for Extreme Gauges:

Oil Pressure 20PSI: **QRP 61-611**

Water Pressure 4PSI: **QRP 61-613**

Oil Pressure 30PSI: **QRP 61-615**

Fuel Pressure 15PSI: **QRP 61-619**

**These kits include a pressure switch, tee for installing to the back of the gauge, and necessary wiring.**

REV.10-24

**⚠ WARNING:** This product can expose you chemicals including lead, which is/are known to the state of California to cause cancer, birth defects or other reproductive harm. For more information, go to: [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov)



www.quickcar.com  
1-800-997-7333

170 Business Park Dr,  
Lebanon, TN 37090