

Instruction Sheet

Product: 56-085

Digital Tire Gauge



To Have Gauge Hold Peak Reading Instead Of Constant Reading

- Hold Zero button until the #1 comes up, then release button.
- Press Zero button when Hold is displayed. Display will flash indicating change was accepted.

To Have Gauge Stay On, Or Turn Off Automatically

- The gauge is preset to turn off automatically after 180 seconds.

To have the gauge stay on:

- Hold Zero button until the #2 comes up, then release button
- Press Zero button when Aon appears. The gauge is now on until turned off.

To adjust how long the gauge stays on when in Auto Off mode:

- Hold Zero button until the #2 comes up, then release button.
- Press the zero button when AoF comes up, then press the Zero button to adjust the number of seconds down, and the On button to adjust the seconds up, then wait for setting to be accepted.

To Have Gauge Read In PSI, Bar, Kgf/cm2, or KPa

- Hold Zero button until the #3 comes up, then release button
- The selections will rotate at the bottom of the screen, press the Zero button when desired selection is on. PSI reading is what comes standard on the gauge.

To Adjust The Gauge Reading Increments

- Hold Zero button until the #4 comes up, then release button
- The options are .1, .5, and .2; press the Zero button when desired amount is showing.
- This is only adjustable in the PSI readings, gauge comes standard in the .1 increments.

To adjust the speed of response of the gauge

- Hold Zero button until the #5 comes up, then release button.
- There are 5 levels to choose from, the lower the number the faster. Press the Zero button when the desired number is on the screen. Gauge is preset at level 2.